


LUG BACKS



7330-L2




7330-L8

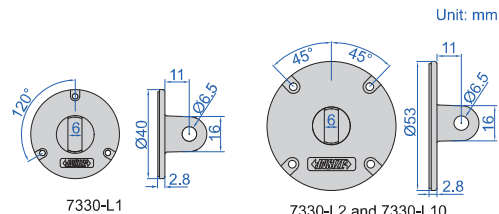

7330-L1


7330-L2 and 7330-L10

Code	For digital/ dial indicators
7330-L1	2311
7330-L2	2301, 2302, 2308, 2313, 2314, 2324, 2316, 2801 2309 (except 2309-30, 2309-30F)
7330-L5	2103, 2104, 2108, 2109, 2112, 2115, 2137, 2116, 2117, 2118, 2501, 2138, 2139, 2508, 2509
7330-L6	2318, 2326, 2307
7330-L7	2830, 2882, 2885, 2888, 2889, 2891, 2892
7330-L8	2887, 2890
7330-L10	2310
7330-L11	2114

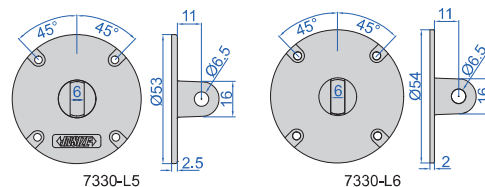


7330-L5


7330-L6

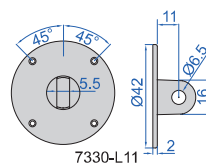

7330-L11

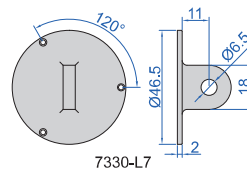

7330-L7

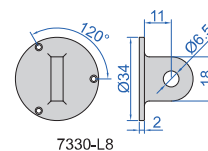

7330-L8